



EN

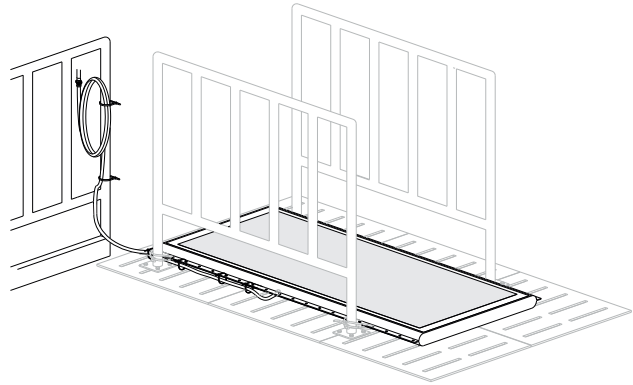

Article no.:
Version: 1.0
Date: 10-02-2025

Parts overview (verification of delivery)

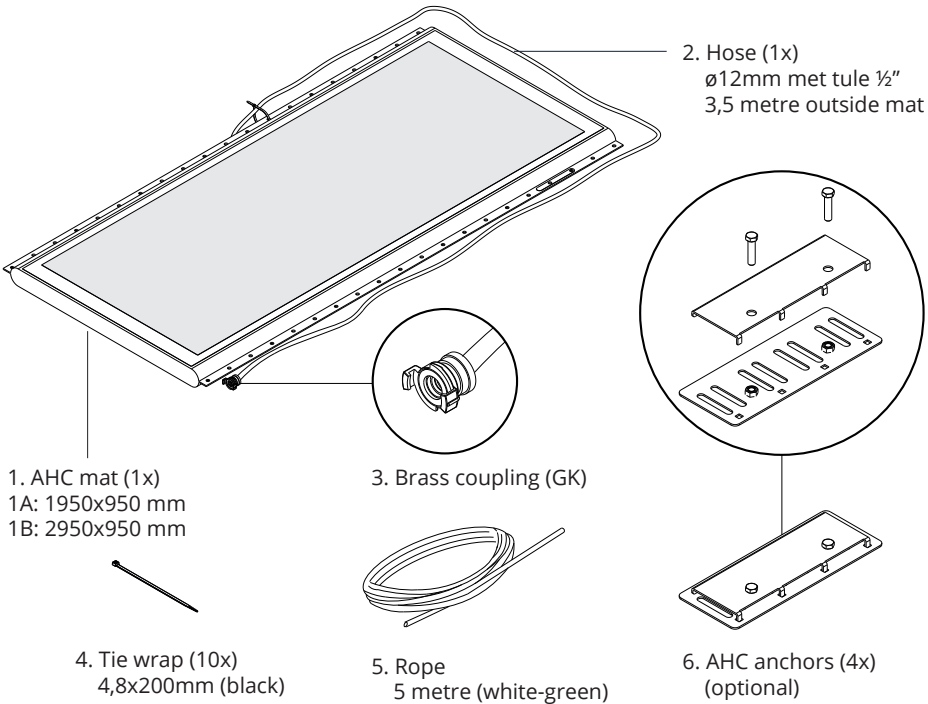

Explanation of symbols



Danger



Cutting hazard



Environment: Remove packaging materials in an environmentally friendly manner.



High pressure washing hazard



Slipping hazard



No access for to unauthorized persons







Required personal protective equipment




Extraction required

Ventilation required

Tool overview

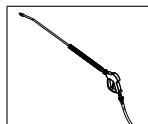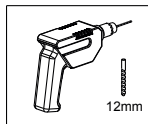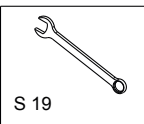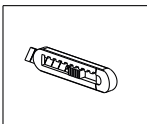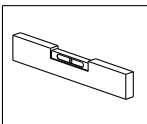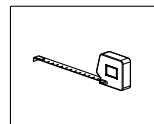

Product dimensions (in mm)

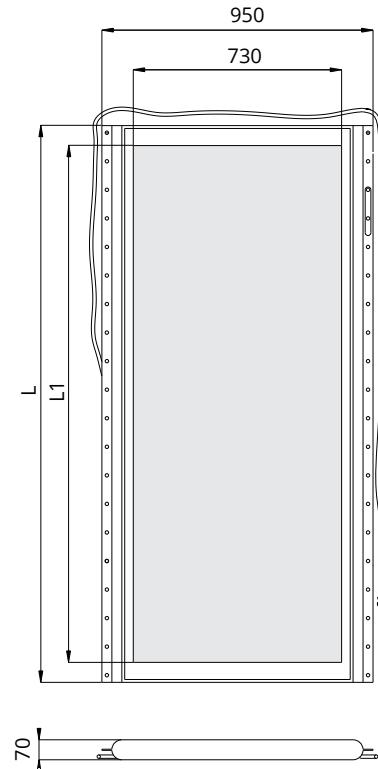

AHC Mat	1A	1B
L (in mm)	1950	2950
L1 (in mm)	1810	2810

Preparation

Determine the installation location.
Flat/level/straight surface for the mat.






CHECK DIMENSIONS


Cleaning the location for the mat.
Remove contamination with HP washer.



No sharp objects.

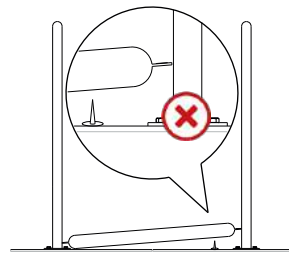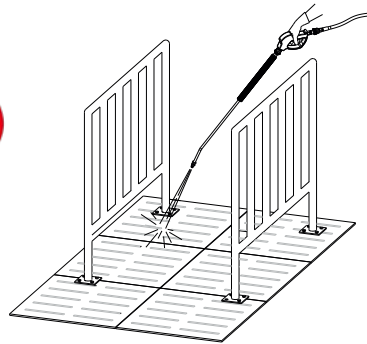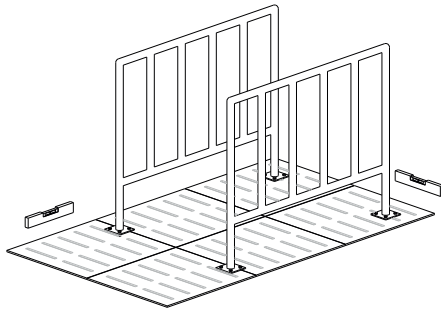


The mat (including parts) is packed in a sleeve.
Cut open the sleeve with a knife at one side. Be careful not to damage the parts! Carefully remove the mat from the sleeve.

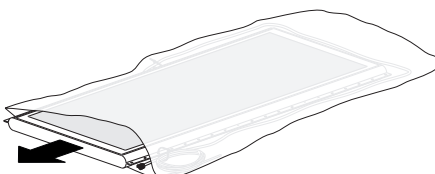

Cutting hazard


Detaches the rope/hose and tie-wraps from the mat by cutting the tie-wrap. Detach the parts of the mat on a clean level surface without grids.

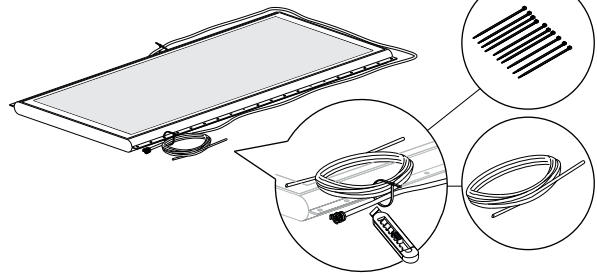

Installation Steps



1

Place/position the mat in the right place between the round tubes/fences.
⚠ Make sure the black side of the mat is at the top.

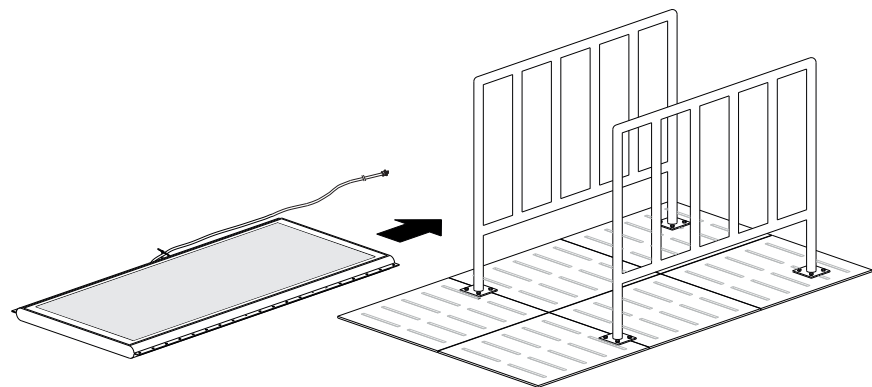



2

Centre the mat between the round tubes/fence.

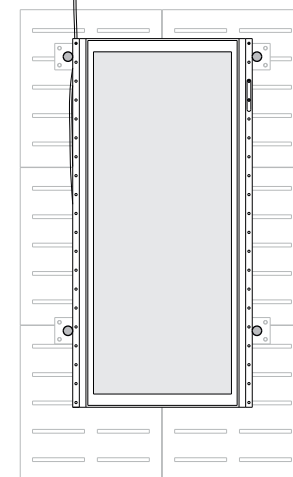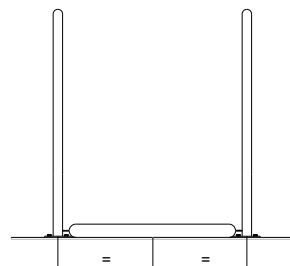


3

Secure the mat to the round tubes at at least 4 connection points with rope.
Tie the rope through the holes of the mat around the round tubes.
⚠ Make sure the mat can not move.
Cut off the excess rope.

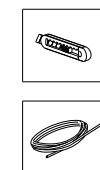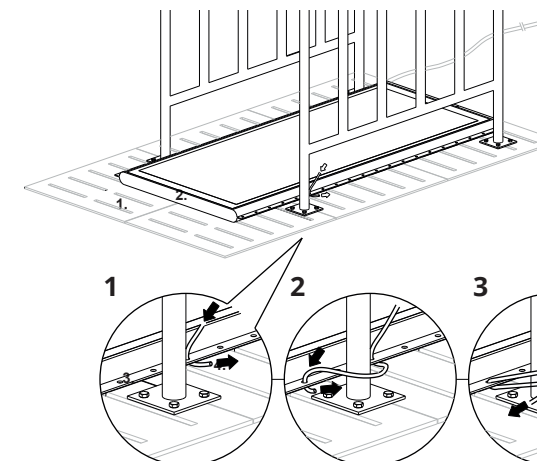


Cutting hazard

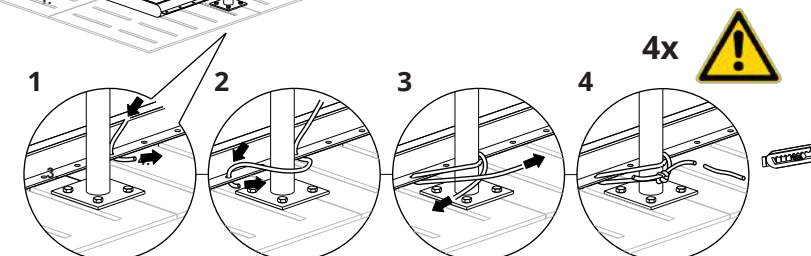


3A

Optional: Securing the mat at 4 fixing points with AHC anchors in concrete.
Position the bottom plate on the ground and pre-drill the holes in concrete.
Place the tabs of the top plate through the round holes in the mat.
Fasten the top plate to the bottom plate with M12 bolts.
⚠ Make sure the mat can not move.

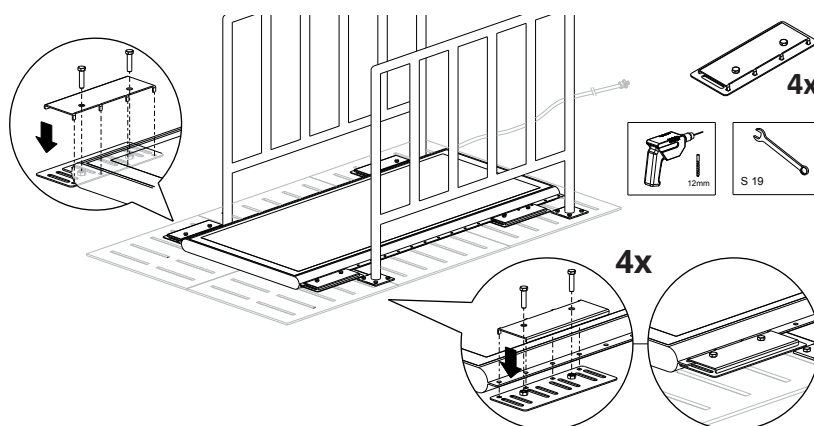


4

Connect the hose using the GK coupling of the supply hose.

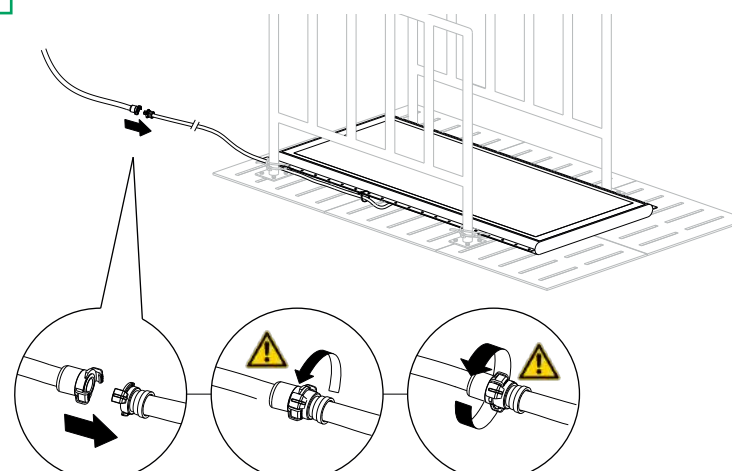

5


Securing the hose to the mat with at least 4 tie-wraps to prevent movement.
⚠ Make sure the hose comes out of the mat in a good loop. Do not attach the hose too tight in one direction at the exit of the mat to prevent leakage.

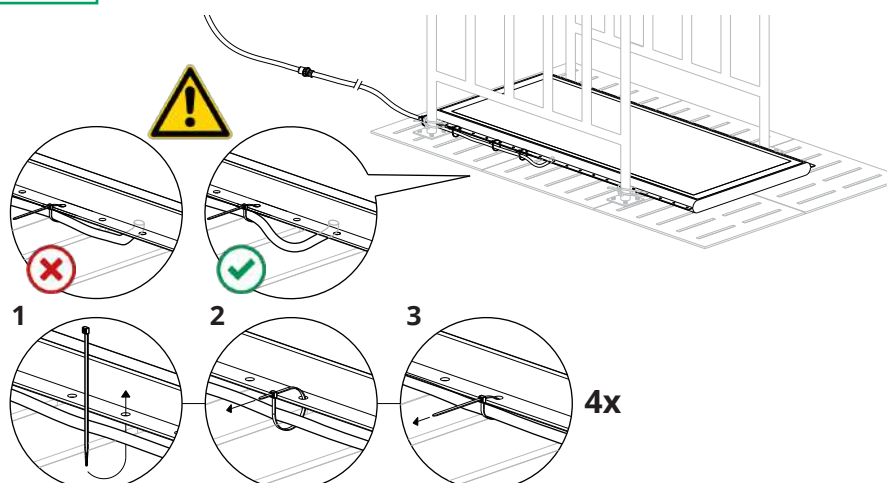

6




Safely arranging excess hose out of reach from cows.
Firmly secure the hose to the round tube with at least 2 tie-wraps to prevent movement. Make sure the hose makes a good loop.

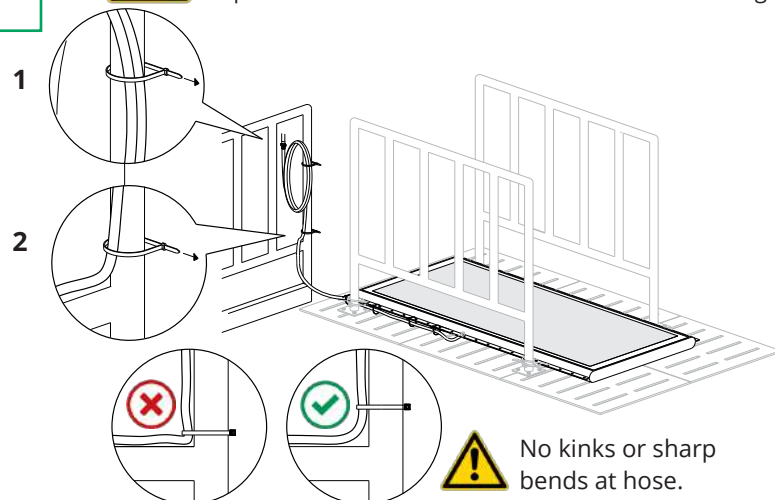

7



Congratulations your MS AutoHoofClean has been successfully installed!

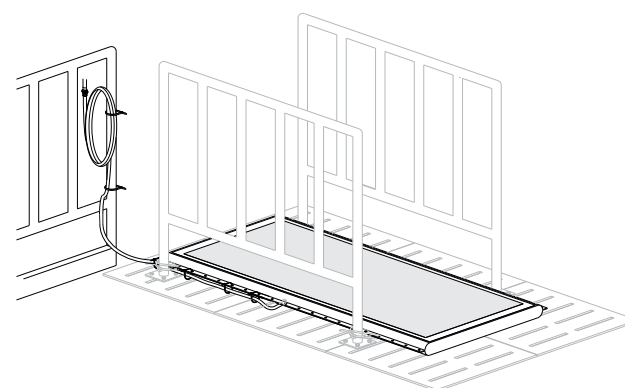

Contact

The Schippers Group B.V.
Smaragdweg 60
5527 LB Hapert
The Netherlands

Phone: + 31 (0)497 339 787

E-mail: klantenservice.nl@schippers.eu

Website: www.msschippers.com

Scan QR-code
for video
installation
instruction

