



EN

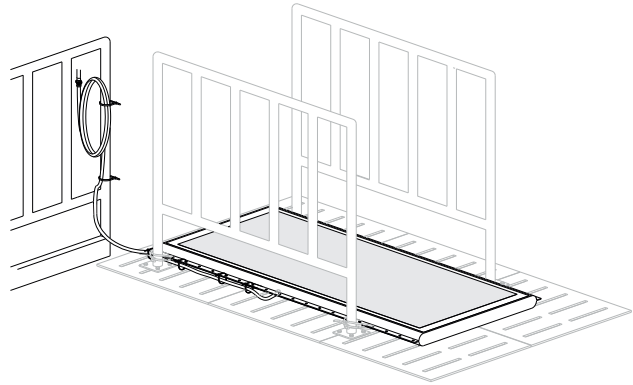

Article no.:
Version: 1.0
Date: 10-02-2025

Parts overview (verification of delivery)

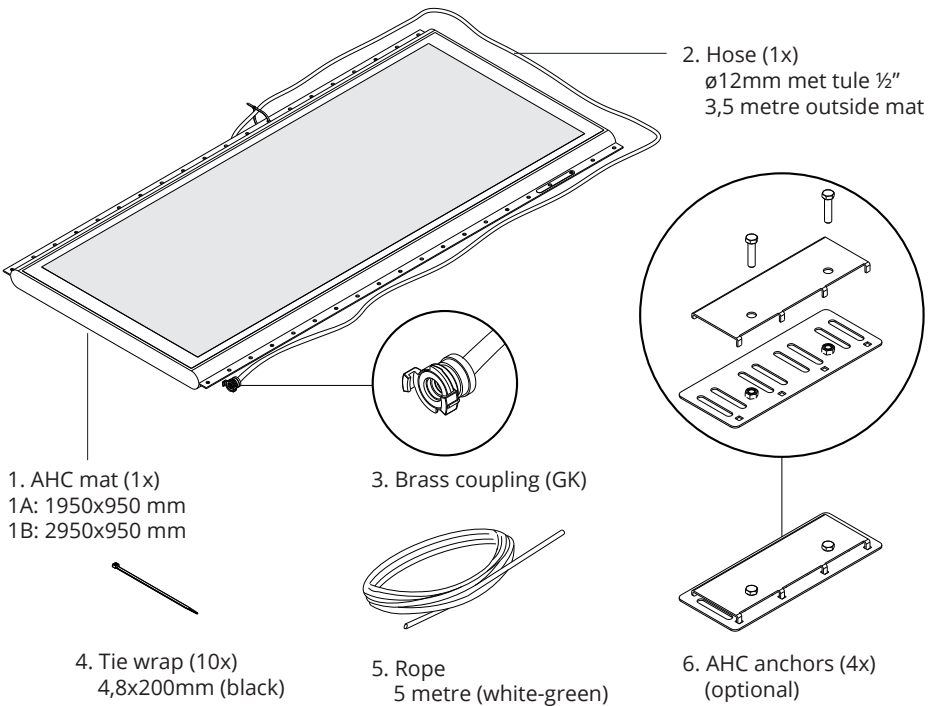


Explanation of symbols




Required personal protective equipment



Tool overview

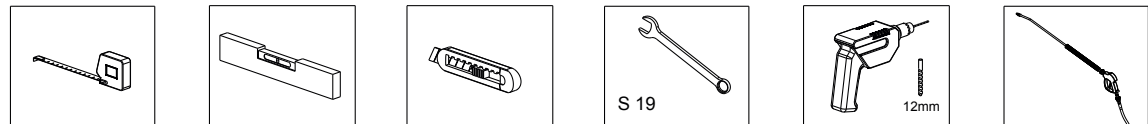

Product dimensions (in mm)

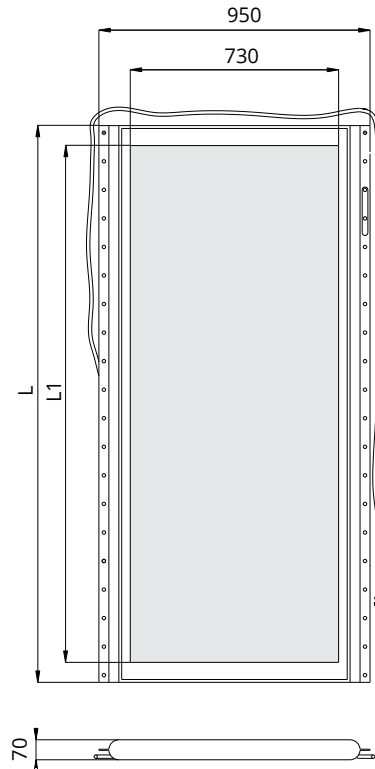


AHC Mat	1A	1B
L (in mm)	1950	2950
L1 (in mm)	1810	2810

Preparation


Determine the installation location.
Flat/level/straight surface for the mat.




Cleaning the location for the mat.
Remove contamination with HP washer.

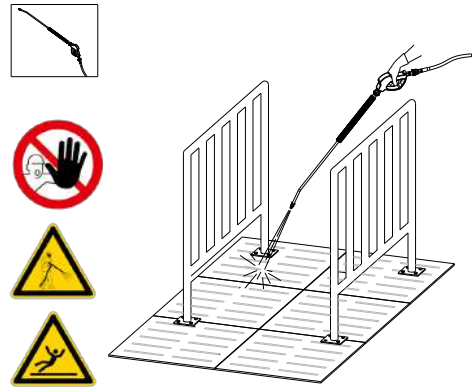


No sharp objects.

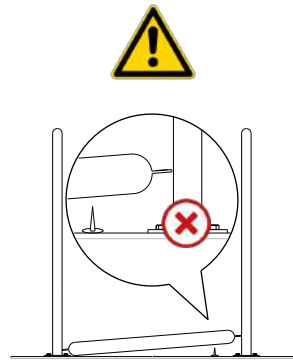

The mat (including parts) is packed in a sleeve.
Cut open the sleeve with a knife at one side. Be careful not to damage the parts! Carefully remove the mat from the sleeve.

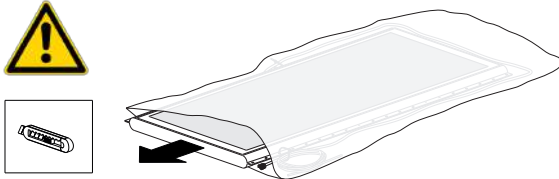


Detaches the rope/hose and tie-wraps from the mat by cutting the tie-wrap. Detach the parts of the mat on a clean level surface without grids.

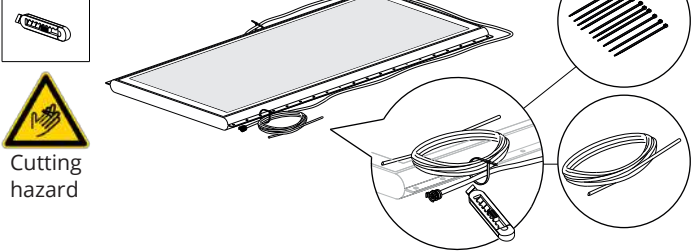

Installation Steps



1

Place/position the mat in the right place between the round tubes/fences.
⚠ Make sure the black side of the mat is at the top.

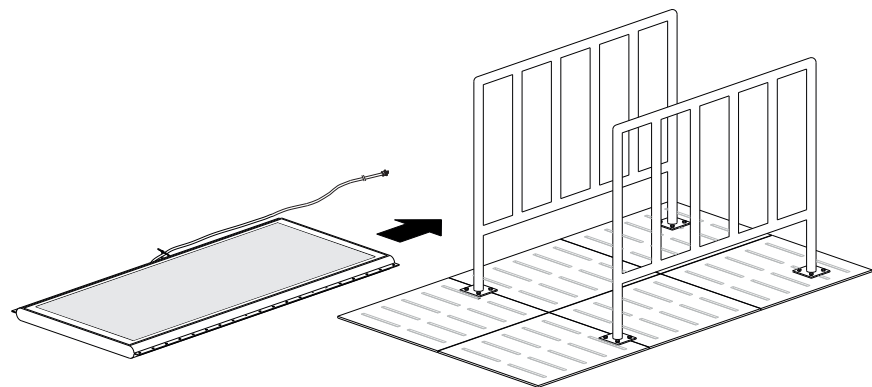



2

Centre the mat between the round tubes/fence.

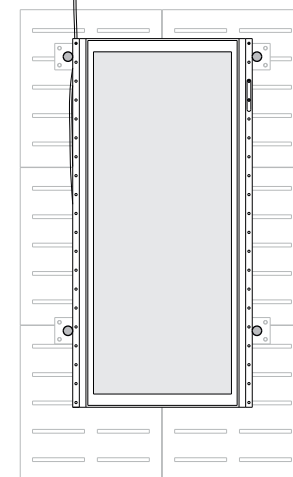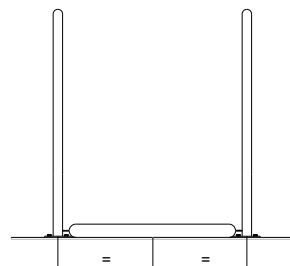


3

Secure the mat to the round tubes at at least 4 connection points with rope.
Tie the rope through the holes of the mat around the round tubes.
⚠ Make sure the mat can not move.
Cut off the excess rope.

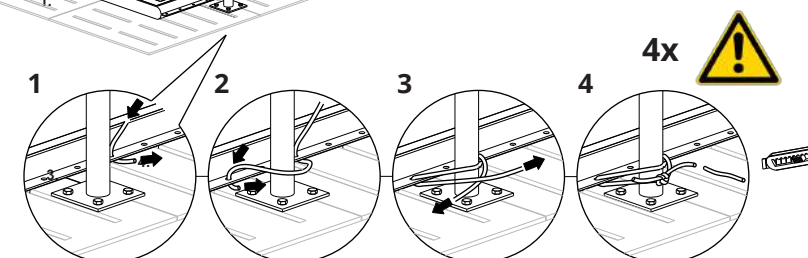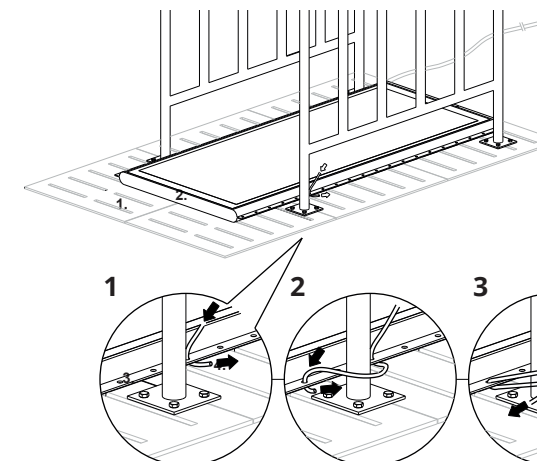


3A

Optional: Securing the mat at 4 fixing points with AHC anchors in concrete.
Position the bottom plate on the ground and pre-drill the holes in concrete.
Place the tabs of the top plate through the round holes in the mat.
Fasten the top plate to the bottom plate with M12 bolts.
⚠ Make sure the mat can not move.

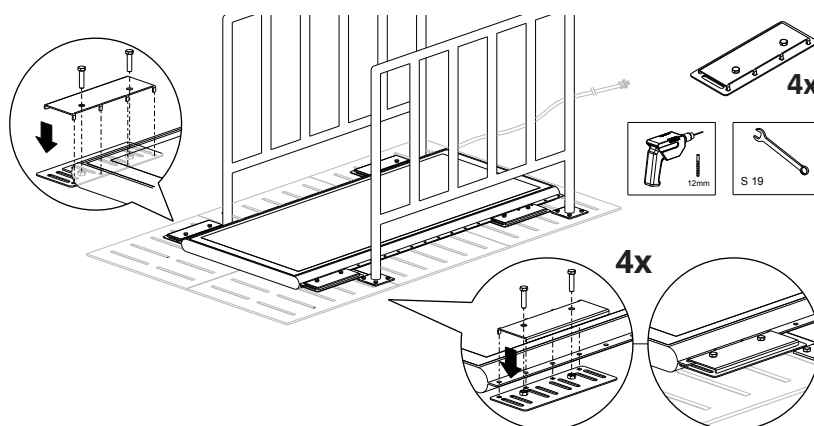


4

Connect the hose using the GK coupling of the supply hose.

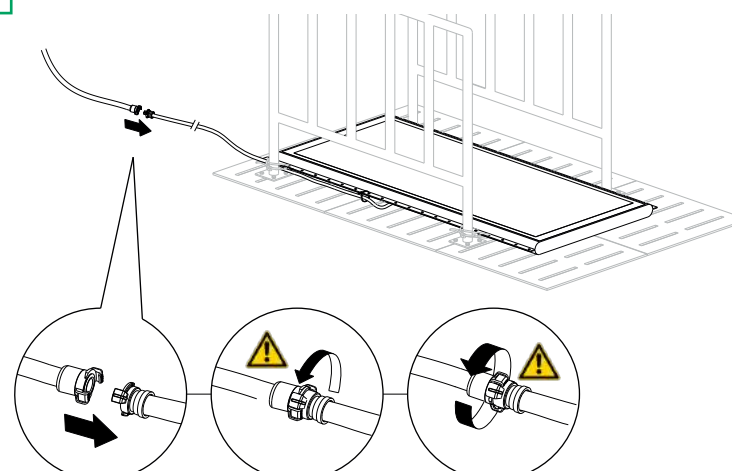

5


Securing the hose to the mat with at least 4 tie-wraps to prevent movement.
⚠ Make sure the hose comes out of the mat in a good loop. Do not attach the hose too tight in one direction at the exit of the mat to prevent leakage.

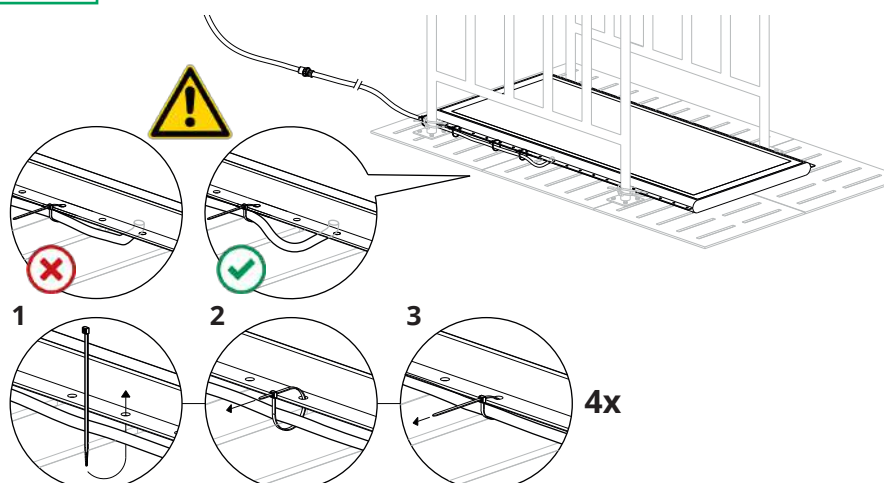

6




Safely arranging excess hose out of reach from cows.
Firmly secure the hose to the round tube with at least 2 tie-wraps to prevent movement. Make sure the hose makes a good loop.

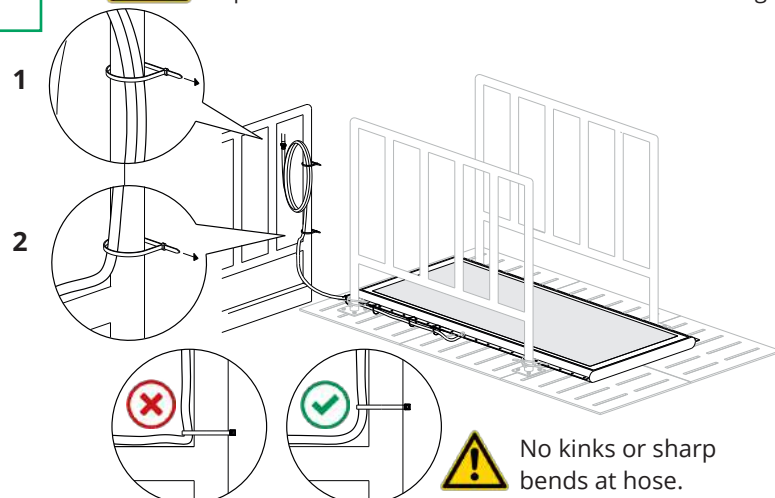

7

✓ **Congratulations** your MS AutoHoofClean has been successfully installed!

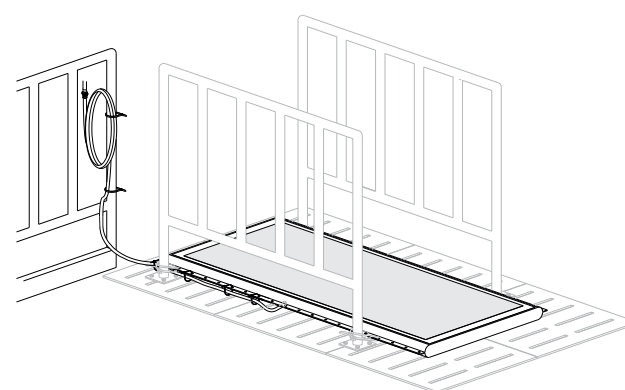

Contact

The Schippers Group B.V.
Smaragdweg 60
5527 LB Hapert
The Netherlands

Phone: + 31 (0)497 339 787

E-mail: klantenservice.nl@schippers.eu

Website: www.msschippers.com

Scan QR-code
for video
installation
instruction

